

SC-PSD

SYSTEM DRESCRIPTION

Coplanar mounting system with **PSA-A** "winged aluminium profile", for the installation of solar panels.






1. CHARACTERISTICS	
Description:	Coplanar mounting system on winged aluminium profile in discontinuous format
System inclination:	Coplanar mounting with parallel installation to the roof surface.
System orientation:	Facing SOUTH, EAST OR WEST depending on the roof orientation.
System materials:	Aluminium, stainless steel and EPDM
Warranty:	Until 10 years depending on environmental conditions (excluding environments exposed to hydrogen sulphide). The warranty is only valid if the complete SC-PSD is used.
Certification:	CE according to EN 1090-1:2009+A1:2011
Compatible solar panels:	
Solar panels type:	Solar panels with frame height between 30mm and 40mm.
Solar panels orientation:	Mounting orientation of portrait (vertical) panels.
Solar panel size:	Adaptable to standard market sizes.
Application area:	
Application area:	Sloping roofs.
Roof slope:	Installation on pitched roofs, slope between 10° and 60°.
Wind load:	Up to 240 km/h. The structure and fixing must be calculated according to local and roof conditions.
Snow load:	Up to 2 kN/m ² . The structure and fixing must be calculated according to local and roof conditions.



2. COMPONENTS

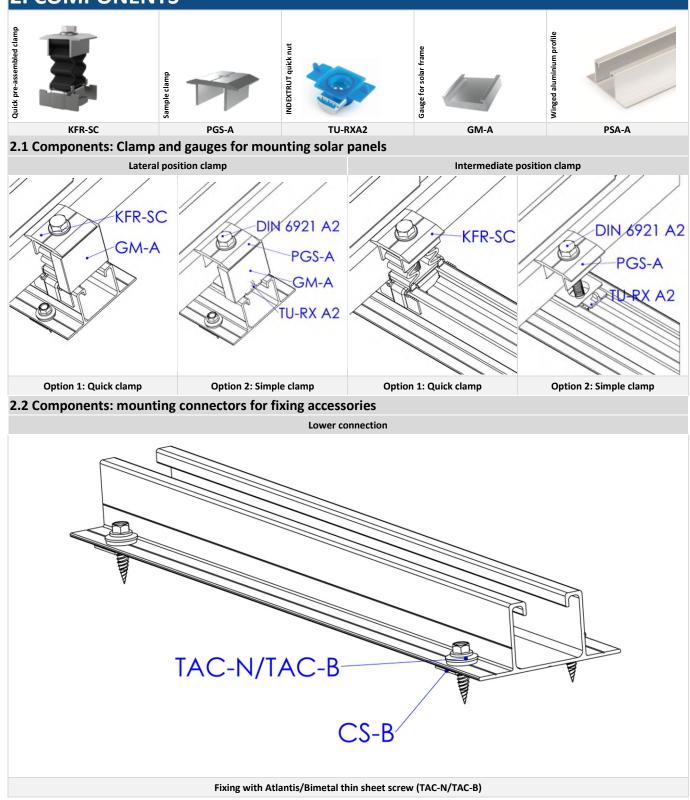

SC-PSD INSTALLATION MANUAL




3. TYPES OF FIXINGS



4. EXAMPLES OF APPLICATION

Example: Sandwich panel roof / Fixing with thin sheet screew

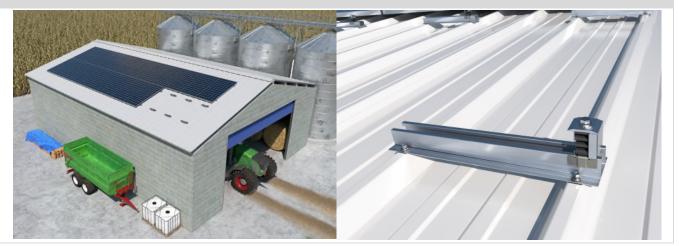



5. INSTALLATION MANUAL

SC-PSD

Coplanar mounting system with PSA-A "Winged aluminium profile"



Read these installation instructions before starting installation and familiarise yourself with the system component. Installation must only be carried out by qualified and experienced personnel.

Installation guidelines:

- Ensure that the roof construction is suitable for the introduction of forces at the fixing points and their subsequent transmission. The building must be able to safely receive the additional loads.
- A structural calculation must be carried out based on the local conditions at the installation site.
- The planning of the layout of the fixing points must be adapted to the requirements of the system and the roof.
- To compensate for thermal expansion, include a spacing every 12m when planning the PV system.
- The solar modules must be installed according to the manufacturer's instructions.
- Follow your local building regulations.
- Make sure to work in accordance with the health and safety regulations in force in your region, during installation and during roof work.
- Do not use the system or fixings as stairs.

SC-PSD INSTALLATION MANUAL




INSTALLATION PROCESS:

STEP 1.- Consult installation drawing

Consult the installation drawing on the roof, where the distribution of the modules is defined as well as the structures that support them and their fixing points.

A. Plan view of SC-PSD system with vertical module orientation (portrait type).

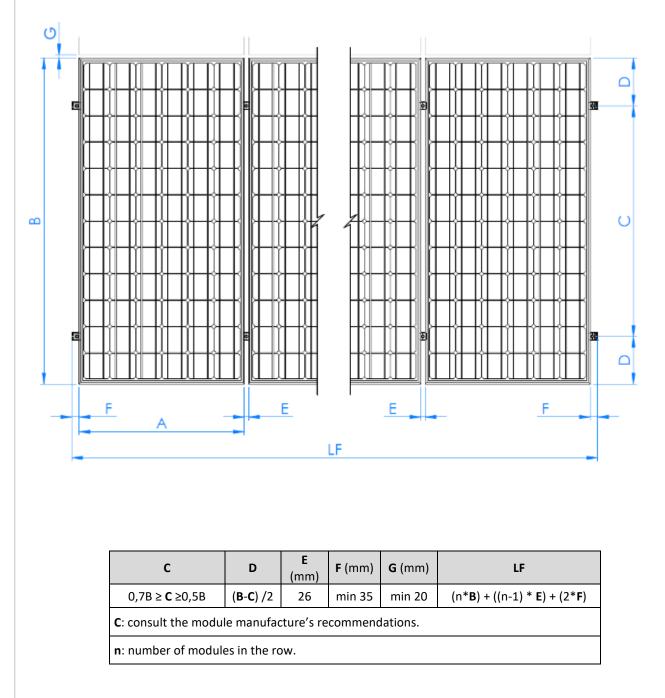


The type of fixing system and the location of its installation points shall be adapted to the needs of the supporting structures and the same time to the needs of the roofs where they must be installed.




STEP 2.- Perform layout on the roof

Lay out on the roof the fixing points of each structure, checking the viability of the installation of each one depending on the chosen fixing system and the characteristics of the roof.

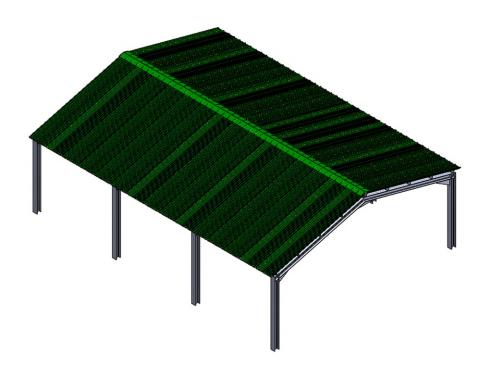

STEP 3.- Installation of the profiles


A. Place the butylene tape on the high areas of the ribs where the discontinuous PSA-A profiles are to be placed.

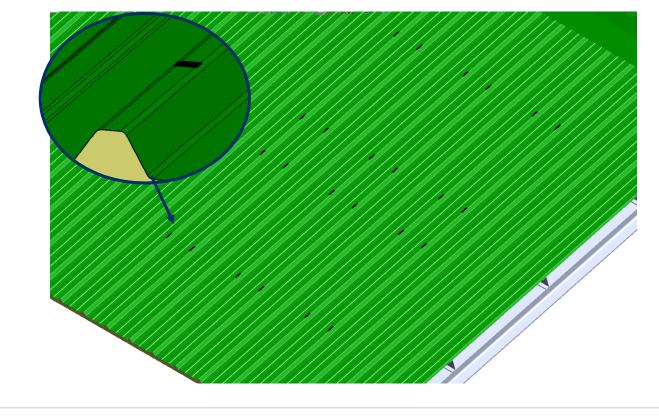

SC-PSD INSTALLATION MANUAL




B. Pre-install the PSA-A profiles by sticking the base onto the butylene tape and fix them with the thin sheet screws. For the installation of the thin sheet screws use an electric screwdriver equipped with hexagon socket SW-8, an installation speed of 1800 rpm is recommended.

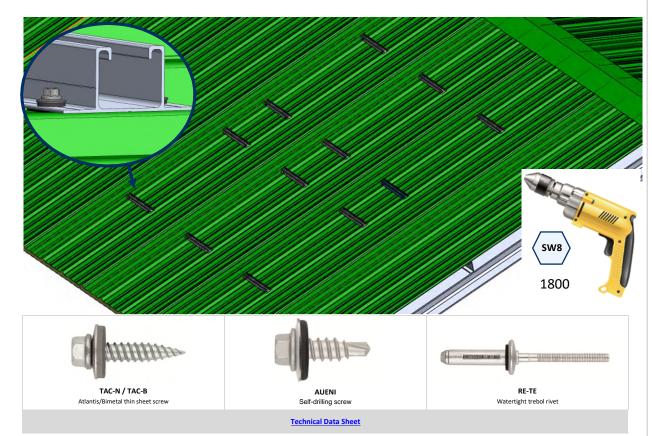

STEP 4.- Pre-installation of clamps on the profiles


To mount the clamp on the profiles, the following steps are necessary:

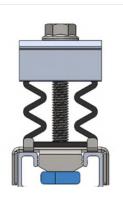


1. Place the clamp in the profile with the lower nut parallel to the profile.

2. To fix the clamp to the profile, the lower nut must be turned perpendicular to the profile by means of the screw, the screw head is pressed down and turned. The nut has a serrated

rail to secure the fixing.

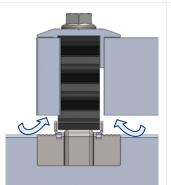

3. Insert the corresponding elements, two panels in the case of an intermediate clamp, or a panel and gauge in the case of lateral clamp.

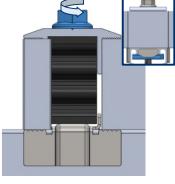


4. To fix the inserted elements it is necessary to turn the crew until they meet the profile. Check that the lower nut remains perpendicular to the profile.



Type of clamp depending on its position:


A. Intermediate clamp

• The intermediate clamp is used when passing from one module to another within the same row, fixing both panels to the structure. This assembly is carried out by means of the screw included in the clamp. A tightening torque of 14 Nm must be applied.

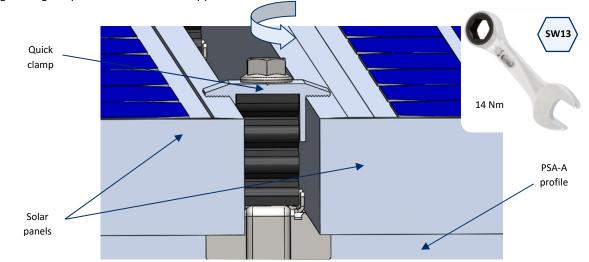

B. Lateral clamp

• Prepare 4 KFRSC3050 quick fixing clamps to be mounted at the ends of each row of panels. Each of these clamps is fitted with a GM-A gauge, mounted as shown in the figure:

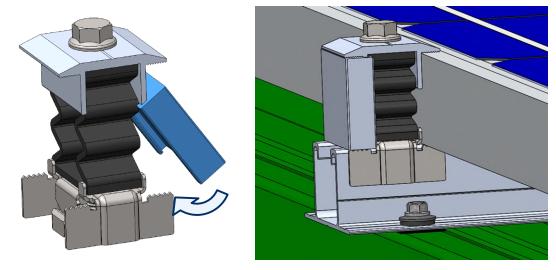

The chosen gauge size must be equal to the frame height of the solar panels to be installed.